

WSM in TAS

Home Vehicle **Information** Diagnostic Services TSB OASIS+ FordService Training Warranty Find Feedback Help

Information Summary Mechanical Repairs Body & Paint Wiring Diagrams Check Sheets FSA Vehicle Conversions Parts Catalog

Last selected vehicle - Fiesta 2008.75 (06/2008-)

Table of contents search Search

- 1 General Information
 - 100 Service Information
 - 100-00 General Information
 - Description and Operation
 - About This Manual**
 - Symbols Glossary
 - Health and Safety Precautions
 - Standard Workshop Practices
 - Solvents, Sealants and Adhesives
 - Road/Roller Testing
 - Air Conditioning (A/C) System
 - Health and Safety Precautions
 - Battery and Battery Charging
 - Health and Safety Precautions
 - Brake System Health and Safety Precautions
 - Engine Cooling System Health and Safety Precautions
 - Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions
 - Liquefied Petroleum Gas (LPG) Fuel Systems Health and Safety Precautions
 - Diesel Fuel System Health and Safety Precautions
 - Supplemental Restraint System (SRS) Health and Safety Precautions

4	-	Self-locking nut with a plastic locking insert
5	-	Self-locking nut with thread deformation (3 indentations)
6	-	Self-locking nut with thread deformation (to oval shape)
7	-	Self-locking nut with integrated locking ring

- All types of seals and gaskets must be discarded and new seals and gaskets installed unless otherwise stated within the procedure.
- Nuts and bolts with a chemical coating for locking and/or sealing and/or antiseize must be discarded unless the procedure advises to reapply the coating with a specified material.
- Nuts and bolts with a mechanical locking such as thread inserts, thread deformation or locking washers must be discarded and new nuts and bolts installed unless otherwise stated within the procedure.
- Torque to yield bolts must be discarded and new torque to yield bolts installed unless otherwise stated within the procedure, recognizable by a tightening torque with more than one stage together with a torque angle.

Reuse of exterior trim parts

All type of glued exterior trim parts or parts fastened with adhesive tape must be discarded and new parts installed unless otherwise stated within the procedure.

Specification data

Specification procedures will only contain technical data that is not already part of a repair procedure.

Sequence of tasks

If components must be removed or installed in a specific sequence, the sequence will be identified numerically in a graphic and